


# A/C UNITS with COOL ONLY

**EVAPORATOR FAN SPEED**

With the bus engine running, rotate knob to set desired fan speed.

- 0 - Turns system OFF
- 1 - LOW Fan Speed
- 2 - MEDIUM Fan Speed
- 3 - HIGH Fan Speed

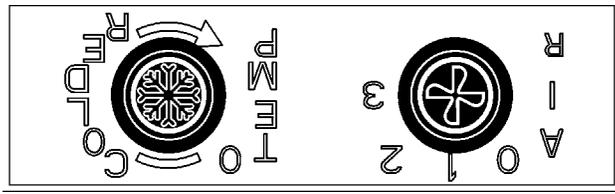

**TEMPERATURE CONTROL**

With the bus engine running, rotate the knob clockwise to increase cooling, and counterclockwise to decrease cooling.

# **SLR for DART**

## **Shuttle Bus Air Conditioning**

*Driver's Operating Instructions*



Contact your local Thermo King Dealer